


Fashion Bed Group

A Division of Leggett & Platt Incorporated

Part List for Salem I Daybed

PART# 340101 HARDWARE FOR DAYBED

- (1) 6mm X 79mm PHILLIPS HEAD SCREW-8
- (2) 6mm X 28mm PHILLIPS HEAD SCREW-4
- (3) 13mm OD X 6mm ID FLAT WASHER-12
- (4) 6mm ID SPRING WASHER-12
- (5) 16mm OD X 6mm ID FLAT WASHER-8
- (6) 6mm HEX NUT-8
- (7) 6mm ID RUBBER WASHER-8
- (8) OPEN WRENCH-1

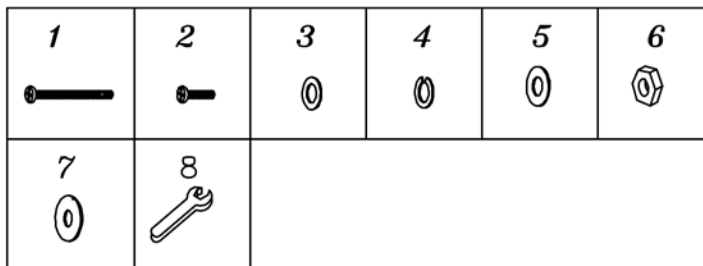

Instructions

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

NOTES

- (1) For easy assembly, you will need a helper.
- (2) Don't completely tighten bolts until link spring and back panel have been assembled to sides.
- (3) After assembly tighten all bolts.

STEPS

- (A) Loosley bolt one end of the link spring to one daybed side. Use 4 screw (1), 4 metal washers (3), 4 rubber washers (7), 4 metal washers (5), 4 spring washer (4), and 4 hex nuts (6). (See Fig. 1)
- (B) Repeat Step (A) for second daybed side. Loosely tighten
- (C) Bolt one end of the daybed back to one side. Insert 2 screws (2), 2 spring washer (4) and 2 metal washer (3) through back rails then into threaded inserts in back post. (See Fig. 1)
- (D) Repeat Step (C) for second end of daybed back.
- (E) Tighten all bolts.
- (F) You are now ready for mattress installation.

Instruction Sheet

